



LadyShip®

貴夫人



生機精華萃取機
Organic Essence Extractor
LS-3000

INSTRUCTION MANUAL
操作使用說明書

感謝您選購貴夫人家電產品，爲了能完全發揮本產品的功能，並延長其使用壽命，請在使用前詳閱本使用說明書。

Thank you for choosing a LadyShip LS-3000 food essence extractor. For safe and proper use of your LS-3000 food essence extractor please read the instruction manual before use.

重要安全指引 / 警告須知	1
維護清潔	2
各部名稱 / 規格 / 操作手冊	3
安裝方法	4
安裝圖示	5
LS-3000 操作模式	6
控制面板	7
使用須知	8
IMPORTANT SAFEGUARDS / COMPULSORY WARNING	9
MAINTENANCE AND CLEANING	10
NAME / SPECIFICATION / INSTRUCTION MANUAL	11
ASSEMBLY	12-13
OPERATION	14
CONTROL PANEL	15
CORRECT USE	16

重要安全指引

1. 避免讓小孩或無人監督的狀況下使用。
2. 避免讓小孩玩此機器。
3. 當機器不在使用中時，立即關上電源開關並且移除插座。
4. 當電源線或插頭損壞、機器顯示異常、機器摔落或是任何形式的故障時，請勿操作機器。
5. 使用前請確定攪拌杯及杯蓋是否有正確安裝於機座上。使用後需靜待調理刀停止運轉後，才可打開杯蓋。
6. 此機器只能使用在 220-240V 的電源插座上。
7. 請勿將此機器使用於其他用途。
8. 此機器設計僅為居家使用。
9. 裝卸插頭時請確實握住插頭處，請勿異常拉扯電源線。不可以電源線撐拉起機器或直接從電源插座上拉扯電源線。
10. 請勿試圖自行維修、組裝或更改機器。如需任何服務，請洽附近合法授權的經銷商認可之專業技術維修人員。
11. 請勿將食材以外的物品置入餘攪拌杯中，例如刀、叉、湯匙等等。此項行為將導致不可預期的嚴重危險。
12. 請勿將馬達本體置入水中。此馬達具有溫控裝置，若有超負荷使用時，會自動停止運轉。須等馬達降溫後（約20分鐘），按下底部黑色按鈕（恢復型保險絲）即可恢復正常使用。
13. 請勿在不平整或不穩定的表面上使用此機器。
14. 請勿在機器使用中搖晃或移動主體。
15. 請勿在高溫處使用此機器。
16. 請勿以本機器處理非常堅硬的食材，如冰糖、桃子、多籽食物等。
17. 如發現機器開始冒煙，請立即從牆上插座移除電源。並請聯絡當地代理商之維修中心。
警告：1. 請勿於本機使用堅硬食物。
2. 清潔時需要接觸刀座，請特別小心。
3. 請依據此說明書使用本機，以免意外發生。

警告須知

1. 如果電源線已經損壞或機器已經無法正常啟動，請立即連絡當地合法授權的經銷商或服務站進行檢測，以避免繼續使用帶來的不可預期的危險。
2. 此產品設計的用途僅限於操作手冊上提及的部分。
3. 本機並非設計予弱能人士或兒童使用，或必須由專人看管指導方可使用。

維護清潔

1. 馬達本體可用乾淨濕布擦拭，請勿浸於水中或用水沖洗。
2. 攪拌杯若有異味，用清水加一小片檸檬，裝至主機攪拌1~3秒鐘，攪拌杯就清香如新。
3. 清洗攪拌杯前，先將攪拌杯從主機上取下，再將攪拌杯、萃取網、水閥（水龍頭）及內管等，分別拆下沖洗乾淨，切勿用筷子或尖銳硬物戳傷萃取網。
4. 清洗後的攪拌杯，將水倒出後再蓋上果汁杯蓋，並裝至主機旋入安全臂，空轉1秒鐘，將調理刀的水份全部拋乾，以確保衛生安全。
 - ▶ 清洗攪拌杯時，請使用瞬間啟動模式。（請參考操作模式）
5. 本調理刀採用 SUS 420特殊鋼刀，使用過後須擦乾，若無拭乾產生水銹亦屬正常（關於拋乾刀具上水份方式，請參閱第四項說明）。
6. 清洗萃取網時，請用牙刷或軟毛刷清洗，請勿使用較硬的刷子刷洗（如：鋼刷或鐵刷），以免導致萃取網破損。
7. 攪拌杯使用完畢後請馬上清洗及擦乾，未飲用完畢之蔬果汁請另用杯子盛裝，避免蔬果汁殘留在杯內時間過長，使調理刀產生水銹。

各部名稱



規格

電 源：220-240V~50/60Hz

消耗電力：850W

容 量：1600ml

回 轉 數：約 20000 RPM

重 量：約 5.5 kgs

操作手冊

感謝您選購 LadyShip LS-3000 貴夫人生機精華萃取機。

為了正確安全的使用您的 LadyShip LS-3000 貴夫人生機精華萃取機，請在使用前詳細的閱讀操作手冊。

安裝方法

盒內配件：

- 1 x LS-3000 馬達本體
- 1 x 攪拌杯，鋼刀和水龍頭組
- 1 x 杯蓋與安全臂
- 1 x 集料盤
- 1 x 集料蓋
- 1 x LS-3000 #1 萃取網（細網）
- 1 x LS-3000 #3 萃取網（粗網）

在組裝您的LS-3000貴夫人生機精華萃取機之前，請先自包裝盒中取出所有配件。（包含安全固定膠袋）

注意：

 
為了衛生安全，建議您在使用之前依照本手冊中〈保養與清潔〉的介紹，仔細的清洗攪拌杯、集料盤、水龍頭、內管、濾網等。但請避免將馬達本體浸入水中清洗。

攪拌杯的組裝：

1. 順時針方向旋出安全臂（如圖一），可將攪拌杯取出。
2. 使用前先將萃取網雙側凸牆，沿攪拌杯雙側凹槽，向下壓至定位後（如圖二），才能蓋上杯蓋。
3. 將食材放入攪拌杯中，並將杯蓋的三角尖口對準攪拌杯三角嘴口壓入，逆時針方向旋入安全臂聽見卡緊聲音為止（如圖三）。
4. 水閥裝置（水龍頭）：清洗時以逆時針方向先將水閥（水龍頭）取下，清潔完畢後，再依順時針方向將水閥（水龍頭）旋轉至定位處（如圖四）。
5. 內管裝置：清洗攪拌杯時，先將水閥（水龍頭）取下，再將內管抽出，清潔完畢後，再順著內管凹槽往內推到底（如圖五），接著裝回水閥（水龍頭）即可。

安裝圖示


圖(一)

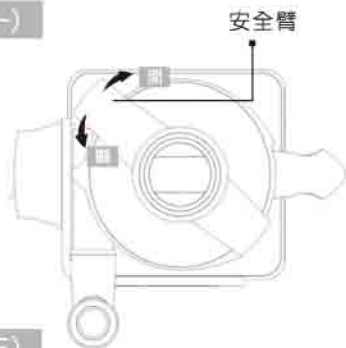

圖(二)



 
圖(三)

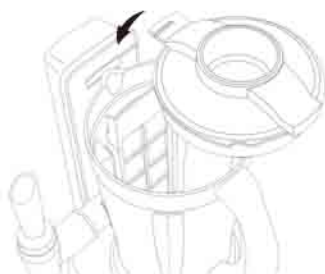

圖(四)



 圖(五)

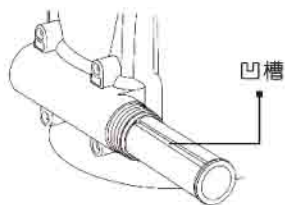

萃取網的使用：

1. 一號萃取網適用於：粗纖維性的牧草、小麥草、一般青草及原汁豆漿、米漿（糯米糰）、西瓜原汁等。
2. 三號萃取網適用於：蕃茄原汁、葡萄原汁、熱食濃湯等。
3. 一般的水果與蔬菜屬細纖維，必須加水調理成完全營養的纖維果菜汁及果泥或冰砂，不需使用萃取網。

※本機型只附贈1、3號萃取網，無2號萃取網

操作模式

 
先電源插入電源，其操作模式如下：

- A. 手動操作模式：操作時手按〈高速〉鍵，此時高速檔指示燈會亮，馬達開始運轉，馬達運轉 1分鐘後自動停止；操作時手按〈低速〉鍵，此時低速檔指示燈會亮，馬達開始運轉，馬達運轉 1分鐘後自動停止，運轉中欲停止，請按〈關〉鍵。
- B. 全自動模式：手按〈自動〉鍵時，自動檔指示燈會亮，馬達開始高速運轉，運轉4秒後停2秒，共5次循環，然後連續運轉30秒後馬達會停止運轉，此時馬達會同時發出約10秒嗶嗶聲，以警告攪拌已完成。
- C. 瞬間模式：操作時手按〈瞬間〉鍵，此時馬達開始以高速運轉，手離開按鍵時，馬達即停止運轉，此模式不可連續運轉15秒鐘，每次間隔休息時間為10秒鐘。

備註：

1. 馬達在A、B操作模式中，當馬達運轉時，手按〈關〉鍵時馬達會立即停止運轉。
2. 馬達運轉中，若順時針方向旋出安全臂，馬達會立即停止運轉。

控制面板

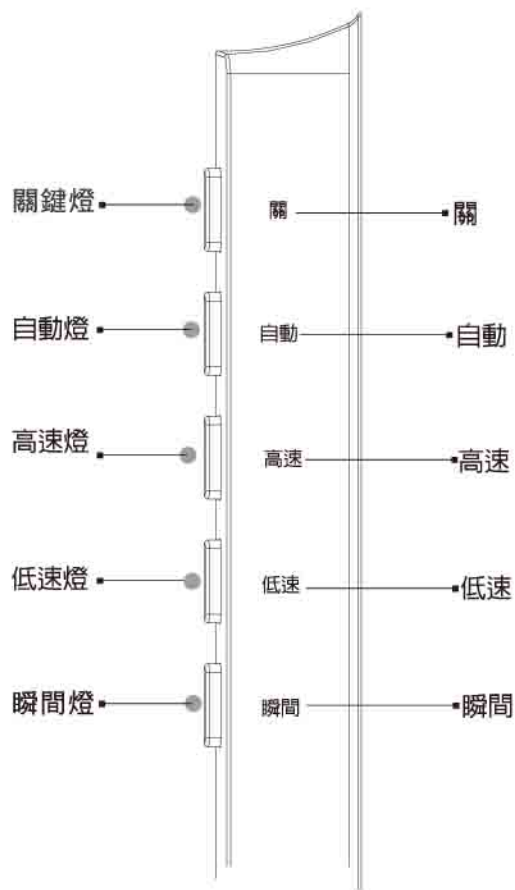

LS-3000

使用須知

1. 攪拌硬質食物或冰塊，請先將蔬果或軟質食物放置杯底，再放入硬質食物或冰塊；若攪拌杯內有硬質食物或冰塊卡住調理刀時請立即關閉電源，先將攪拌杯從主機上取下，並用長匙或筷子攪拌後，再裝入主機重新啟動。
2. 因為自製冰塊較大，使用時須先剝成小塊或使用衛生冰塊最能達到攪拌效果。
3. 多汁的蔬果類可以不需加水就可以攪拌成蔬果泥，例如：鳳梨、蕃茄、葡萄...等。
4. 少汁的蔬果需加200cc~300cc的水才可以攪拌成蔬果泥，如：紅蘿蔔、蘋果、葉菜類...等。
5. 調製生機飲食時，蔬果不能一次放太多，約攪拌杯的一半，再加入200cc~300cc的水，攪拌成蔬果泥後再加水稀釋，就是可口健康的纖維生機飲食。
6. 攪拌冰砂時，請使用瞬間啟動模式。

IMPORTANT SAFEGUARDS

1. This appliance is not intended for use by children or infirm persons without proper supervision.
2. Children should be prevented from playing with this appliance.
3. Switch off the power outlet and remove the plug when the appliance is not in use.
4. Do not operate the appliance with a damaged cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
5. Please make sure the jar and jar cover are located correctly on the motor body. Please wait until the blade has fully stopped before removing the jar and opening the jar cover.
6. This appliance is intended to be plugged into a 220-240V outlet only.
7. Do not use this appliance for any other use other than its intended use.
8. This product is intended for household use only.
9. Do not misuse the cord. Never carry the appliance by the cord or pull the cord to disconnect it from the outlet. Instead grasp the plug and pull to disconnect.
10. Do not attempt to repair, disassemble or modify the appliance. If service is required seek out an authorised service agent.
11. Do not insert or allow foreign objects, such as knives, forks, spoons, etc to enter the jar as this may cause damage to the appliance.
12. Do not place the motor body in water.
13. Do not attempt to use this appliance on an uneven or unstable surface.
14. Do not shake or move this appliance while it is operating.
15. Do not use this appliance in high temperature areas.
16. Do not use hard solid food with this appliance.
17. If the appliance starts smoking pull the plug out of the wall socket immediately, then contact the authorised service agent.

WARNING: Do not use hard solid food with this appliance.

WARNING: Care must be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

WARNING: Only use this appliance as intended or injury may occur.

COMPULSORY WARNING

1. If the supply cord is damaged; the appliance is defective in any way; it must be replaced or repaired by the manufacturer or its authorised service agent or a similarly qualified person in order to avoid a hazard.
2. This product has not been designed for any use other than those specified in this booklet.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

MAINTENANCE AND CLEANING

1. Clean the motor wipe with a slightly damp cloth only. Do not immerse the motor body into water or other liquid.
2. If the jar does smell, blend with a slice lemon and water for 1-3 seconds. The jar will become fresh.
3. Wash the jar, jar cover, cap, filter, spigot and inner tube under the running water. Do not use sharp utensil to clean the filter to avoid any damage.
4. After following above washing instructions, rinse and place the jar back on the machine as per normal operation and turn it on for 1 second. To ensure the blade is dry thoroughly. (Please use the Pulse button for 1 second operation).
5. The blade is made from S US 420, please keep it in dry place after washing or furring may occur on the blade surface.
6. Please use soft brush to clean the filter. Do not use hard brush or sharp utensil to avoid any damage.
7. Please clean the jar immediately after use. Pour out the juice in other container if any after operation. This avoid the furring of the blade.

NAME



SPECIFICATION

Voltage : 220-240V~50/60Hz

Power : 850W

Capacity : 1600ml

Revolutions : 20000RPM (Approximately)

Weight : 5.5 kgs (Approximately)

INSTRUCTION MANUAL

Thank you for choosing a LadyShip LS-3000 food essence extractor. For safe and proper use of your LS-3000 food essence extractor please read the instruction manual before use.

ASSEMBLY

What's in the box?

- 1 x LS-3000 motor body
- 1 x jar, blades and spigot set
- 1 x jar lid with safety arm
- 1 x jar lid cap
- 1 x jar lid funnel
- 1 x LS-3000#1 filter (fine)
- 1 x LS-3000#3 filter (coarse)

Before assembling your LS-3000 food essence extractor remove all parts from the packaging, including all plastic bags.


NOTE : For cleanliness before use we suggest you wash the jar, jar lid, spigot, jar lid funnel, jar lid bung and filters as per the Maintenance and Cleaning instructions in this manual.

Jar Assembly :


1. Turn the safety arm of lid clockwise to take out the Jar (Picture 1).
2. Select the desired filter and place the filter in the filter housing inside the jar next to the spigot outlet (Picture 2).
3. Put the food into the jar. Place back the lid and turn the safety arm anti-clockwise until it is locked (Picture 3).
4. Install the Spigot: Turn the spigot in clockwise direction to take out and for cleaning. Install it back to the jar by turning anti-clockwise (Picture 4).
5. Install the Inner Tube: For cleaning please take out the inner tube after the spigot is removed. After cleaning, please place back the tube by aligning the filter with the outer tube (Picture 5). Then install the spigot back.

ASSEMBLY


Picture 1

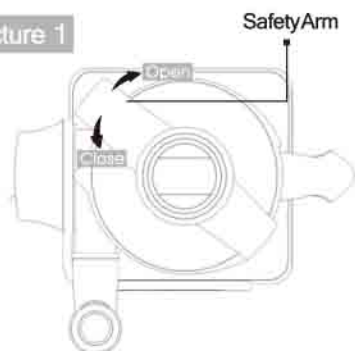

Picture 2

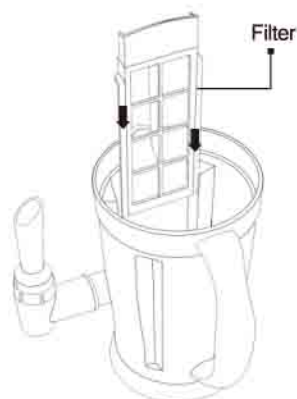


Picture 3

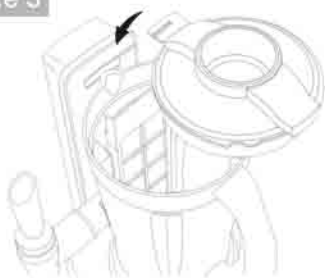

Picture 4



Picture 5

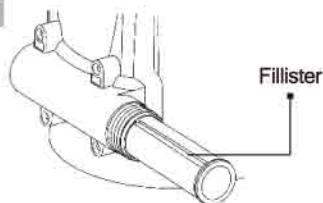**Filter Use**

1. The #1 filter is mostly used for removing the pulp, when preferred, from thick fiber vegetables, fruits, grass, plant leaf soybean (milk), rice (milk), etc.
2. The #3 filter is mostly used for removing the pulp, when preferred, for juices such as grape juice, tomato juice, tomato paste, pumpkin soup, green bean cordial, red bean milk tea.
3. Most low fiber vegetables and fruit will not require the use of a filter, however it may be useful in some circumstances to add approximately 200ml of water depending on the quantity being juiced / blended.

OPERATION

The LS-3000 food essence extractor is a relatively simple appliance to use once you have read and understood the instruction manual.

Once the appliance has been plugged in to the power and the safety arm on the jar lid has been engaged the "Ladyship" will illuminate indicating the appliance is now ready for use.

1. Hi or Low BUTTON :

When you push the "Hi or Low" button, the "Hi or Low" LIGHT will illuminate and the motor will start operating. The motor will stop automatically after 1 min.

2. Auto PROGRAM BUTTON :

Your LS-3000 has been pre-programmed with a single special blending/juicing program. When you push the "Auto" button, the "Auto" LIGHT will turn on and the appliance will enter the pre-programmed sequence as follows; the motor will operate for 4 seconds then stop for 2 seconds for a total 5 cycles; the motor will then operate continuously for 30 seconds; the motor will then stop automatically and an audible alarm will be heard to notify you the sequence is complete.


3. Pulse BUTTON :

When you hold down the "Pulse" button, the motor will start to operate. and when your finger leaves the "Pulse" button, the motor will stop. The "Pulse" button has been designed for 2 - 3 second bursts only. For longer blending/juicing periods use either the "Hi / Low" or "Auto" functions.

Remarks:

1. When the "OFF" button is pressed during the operation of above Mode A and B. the motor will stop operated immediately.
2. If the safety arm of jar cover is removed clockwise during operation. the motor is stop operated immediately.

CONTROL PANEL

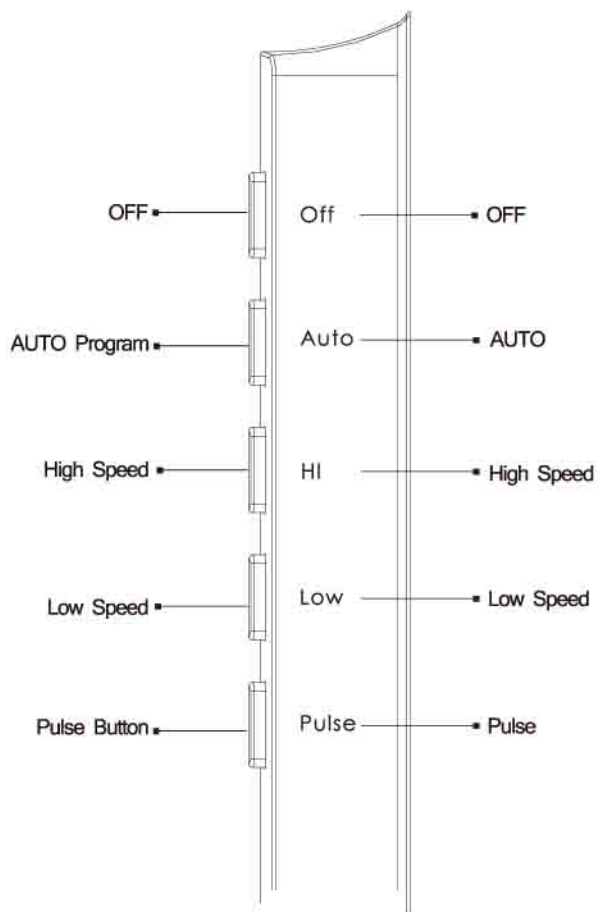

LS-3000

CORRECT USE

1. When placing ingredients into the jar put the soft ingredients in first followed by the denser ingredients. If ice or food sticks to the blade, stop the machine, remove the jar from the base. Remove the food from the jar and blade. Once clear replace the food and continue blending / juicing.
2. When combining ice with other ingredients use small blocks rather than large blocks as this will preserve your machine.
3. For low fibre high water content fruit, vegetables and leaves; blending / juicing can be done without adding additional water. e.g. watermelon, grapes, tomatoes, etc.
4. For high fibre low water content fruit, vegetables and leaves; blending / juicing add 200cc - 300cc of water (water should just cover the ingredients) . e.g. carrots, apples, kale, etc.
5. During operation, please do not put much food in once. Place the food with half jar and 200cc- 300cc water. You can add water to liquify after blending if necessary to make the healthy juice.
6. When blending Sorbet, please use the PULSE button.



貴夫人

 **Neuro Fuzzy Logic**

*Keeping Quality in Essence
Keeping Quantity as Whole*



AFTER SERVICE INFORMATION
維修保養服務