

Purified water jug




RF-800 2.0 liter capacity



Your Dr.WATER Syetem

Thank you for choosing Dr. WATER, the European well-known brand of househole water filtration with pantent of Stress-free hollow reverse osmosis. The Dr. WATER system conforms to SGS water quality examination which ensures you to have healthier drinking water.

Filter replacement indicator

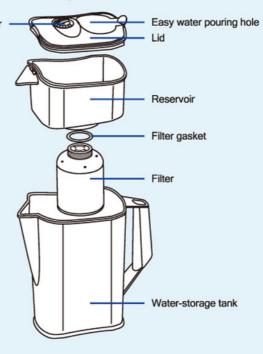



Filter Change Steps





Before installing the new filter, the black rubber cover has to be put on.





Connecting the filter with the faucet.

Continuous pouring the filter with tap-water.

Stop pouring while five small holes start to spray around ten seconds.

Installing the filter without the black rubber cover.

PS: It is normal for carbon dust to appear in your first pour.



Getting Started

Please follow the steps to assemble your Dr. WATER System to ensure the best filtration effect.





Pouring the new filter with water, and locking the filter in the reservoir with filter gasket in the middle. PS: Please refer to "filter change steps" for the begining.

2



Putting the reservoir with the filter into the water-storage tank.

3



Covering the lid properly.





Opening the easy water pouring hole to pour the reservoir with water.





Waiting for the automatic filtration completes.

To ensure the best filtration effect, please discard your first tank of filtered water.





The filter replacement indicator can record the month each time you replace your filter which should be replaced after six months (about 2 liters for the average family).



Important notes

- This product is designed for tap-water, and DO NOT use unclear water or microbial contamination water source.
- Please use cold tap-water only.
- Please discard your first tank of filtered water.
- Please wash your new system with normal water, and follow "filter change steps" to intall a new filter.
- Please keep the Dr. WATER system far away from the solarization and the high temperature, and make sure the Dr. WATER system is stored in a shade place with the lid covered properly.
- Please use the drinking water within 24 hours to avoid the bacterium multiplying.
- Please use mild detergents for cleaning, and DO NOT apply any cleanser to the filter.
- DO NOT put the Dr. WATER system into dish drier to avoid any damage to the product.



SGS Water Quality examination

The Dr. WATER system conforms to SGS water quality examination.

We give you healthy purified water with raw drinking water standard.









KEN YING ENTERPRISE CO.,LTD.

TEL: 07-7315068

No.8-1, Meishan Rd., Niaosong Dist.,

Kaohsiung City 83346, Taiwan E-mail: ladyship@ladyship.com.tw http://www.ladyship.com.tw